 
 
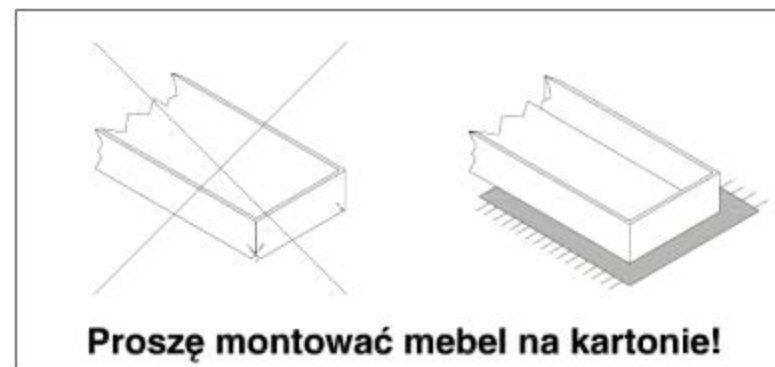 
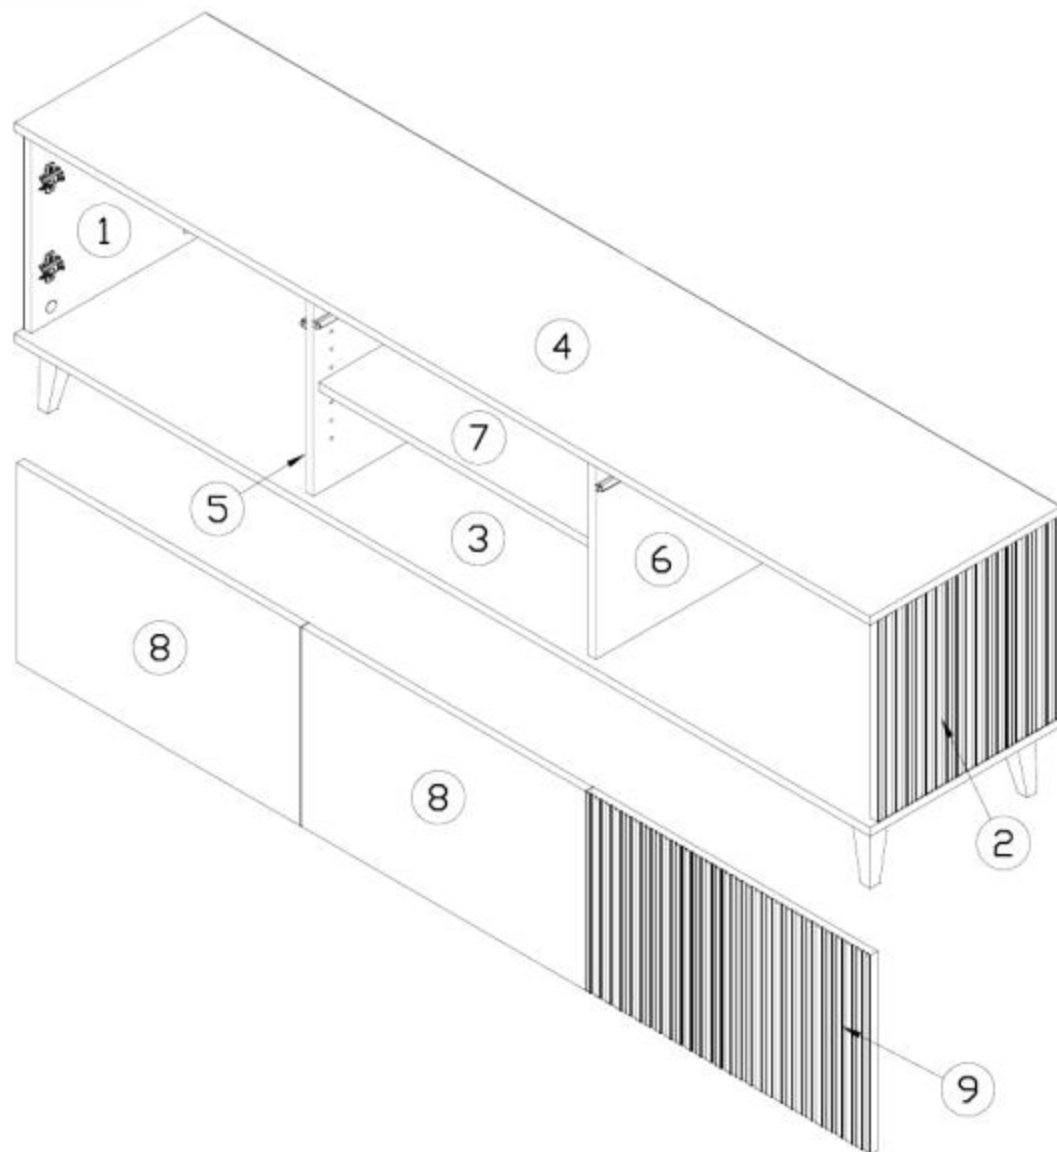 
 


RTV 180


Do montażu
potrzebne są:
Für die Montage
dieser Type
benötigen Sie:

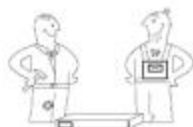


BAG 1



 BAG 2



BAG 3

 




BAG 4




BAG 5



   
RTV 180

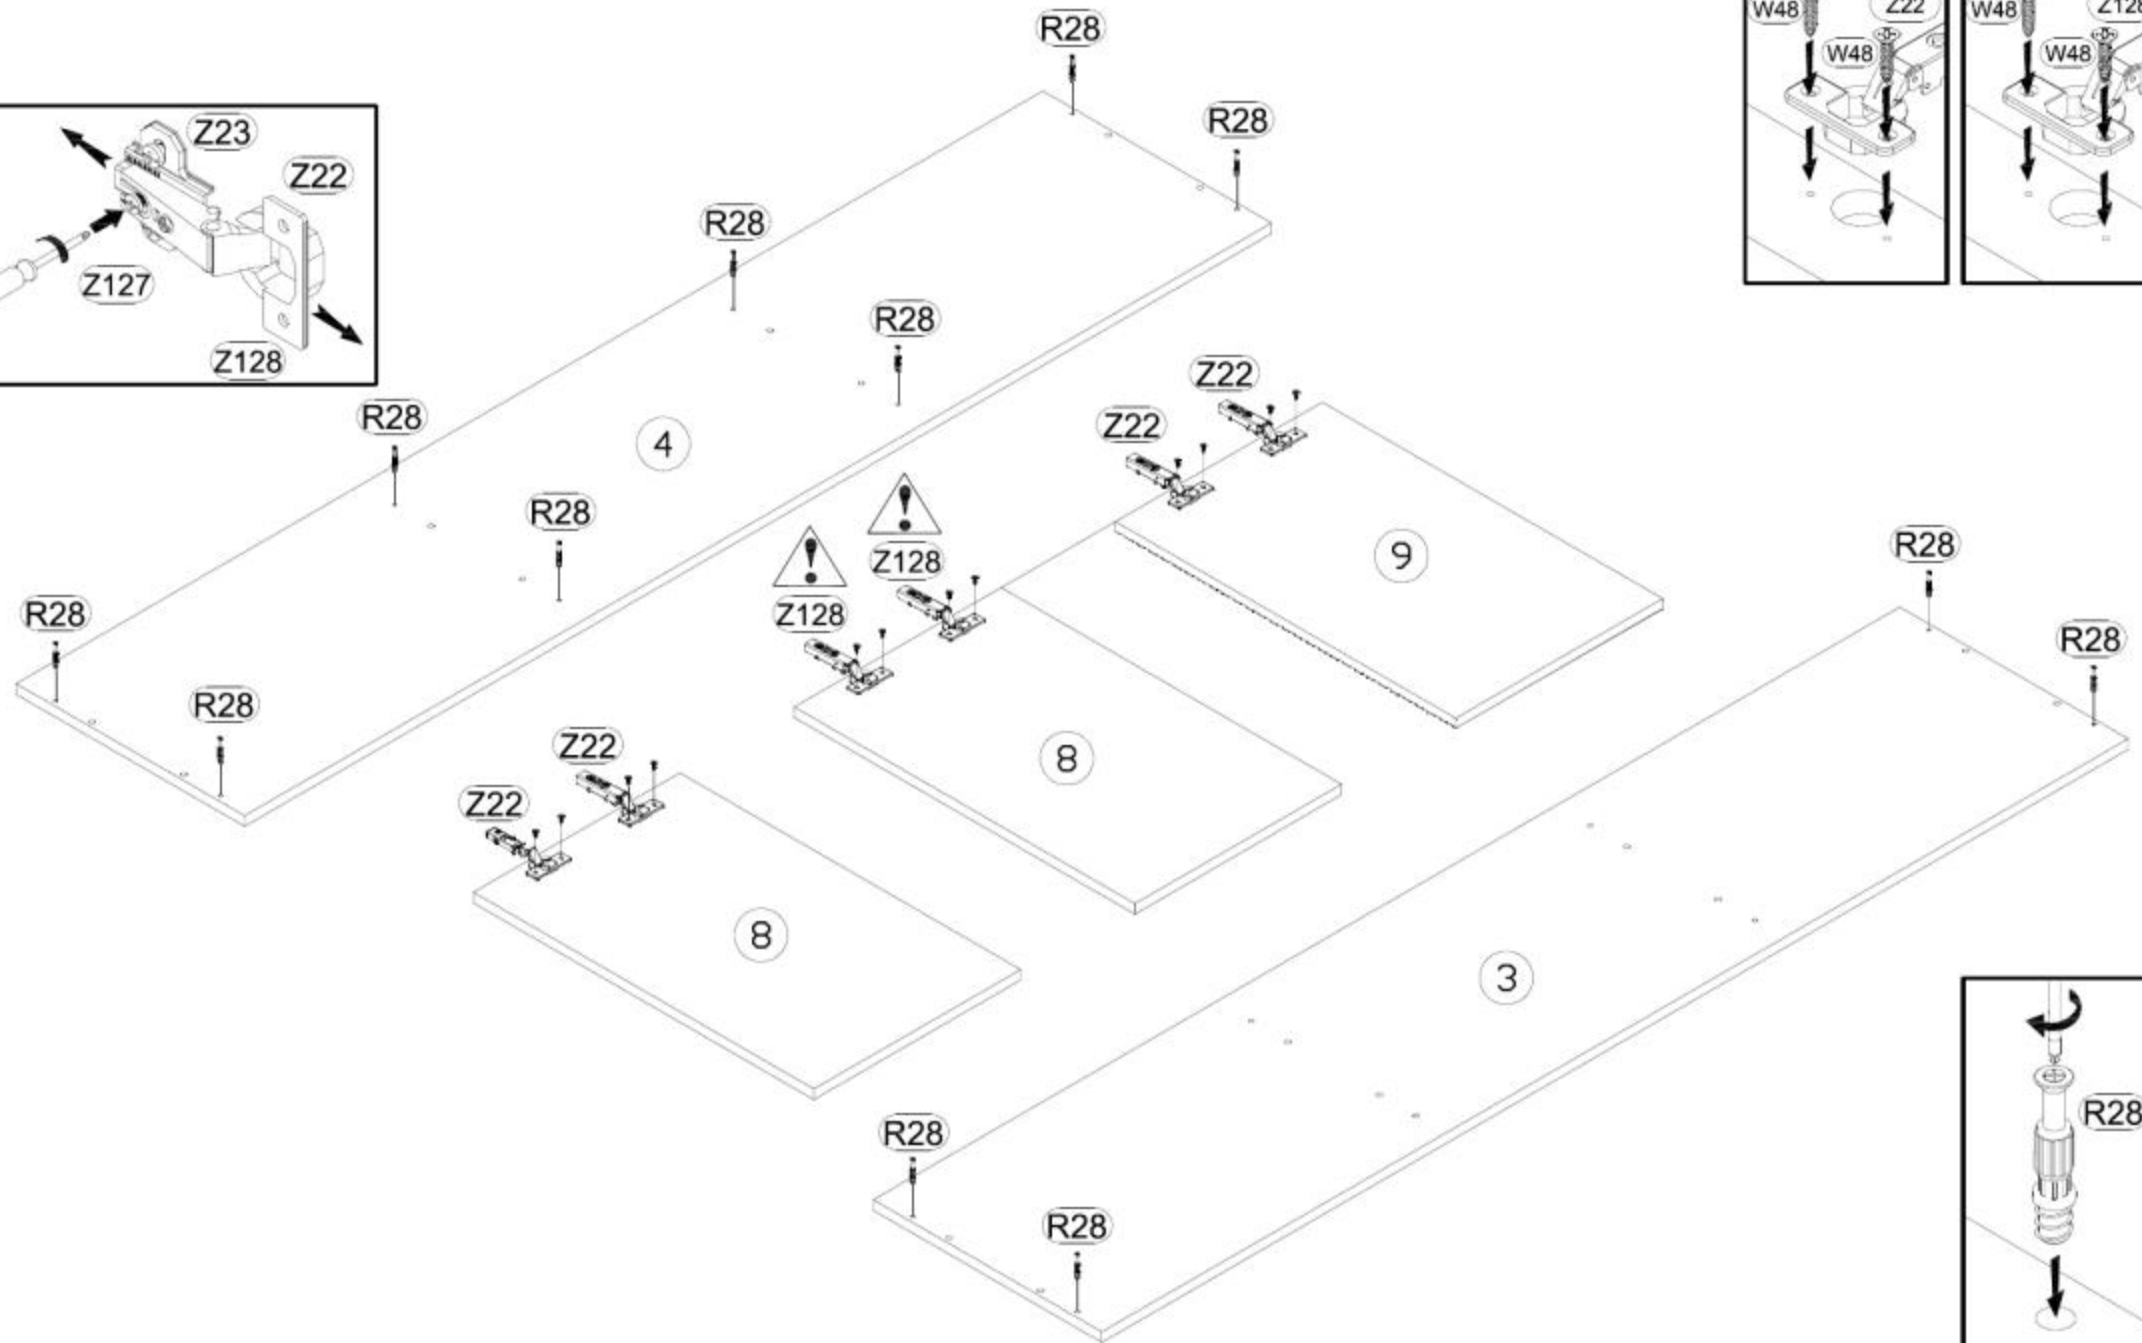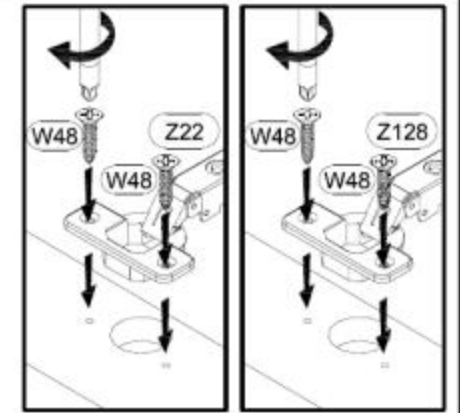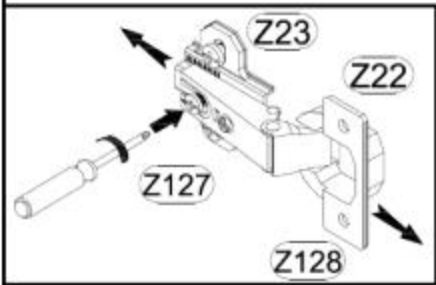

RTV180









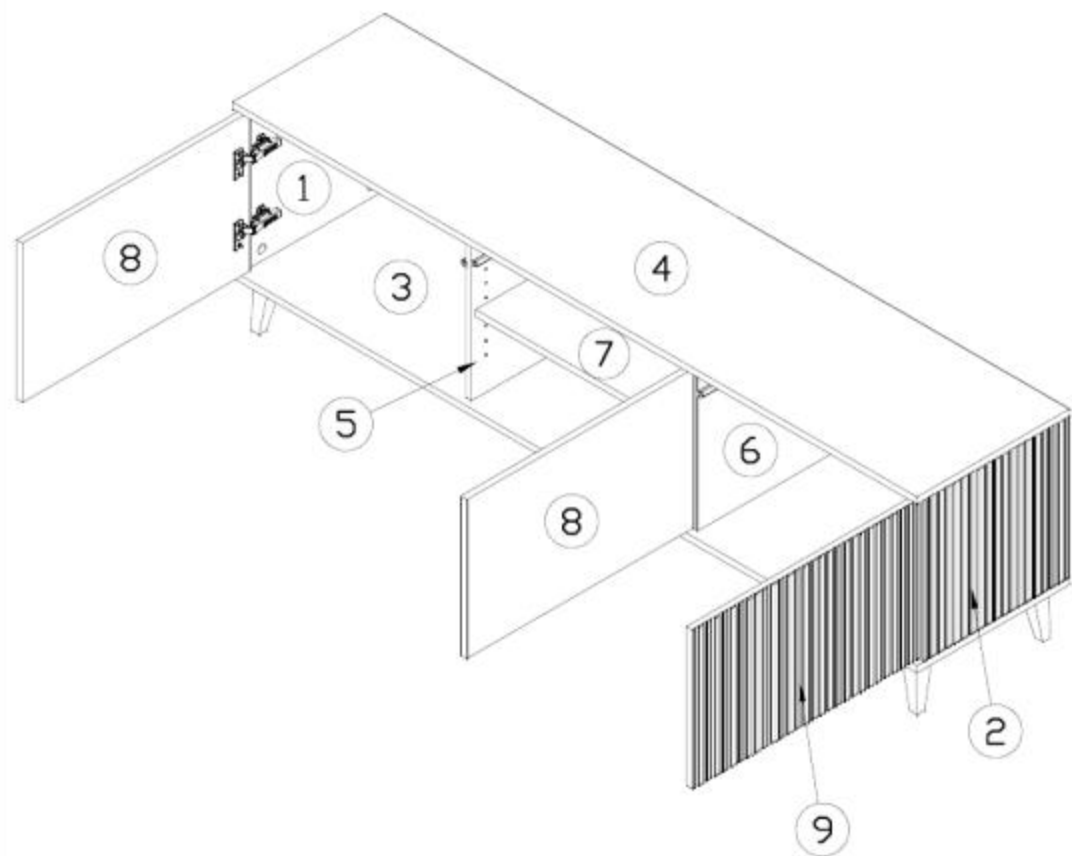 


"RIGHT" 2-5





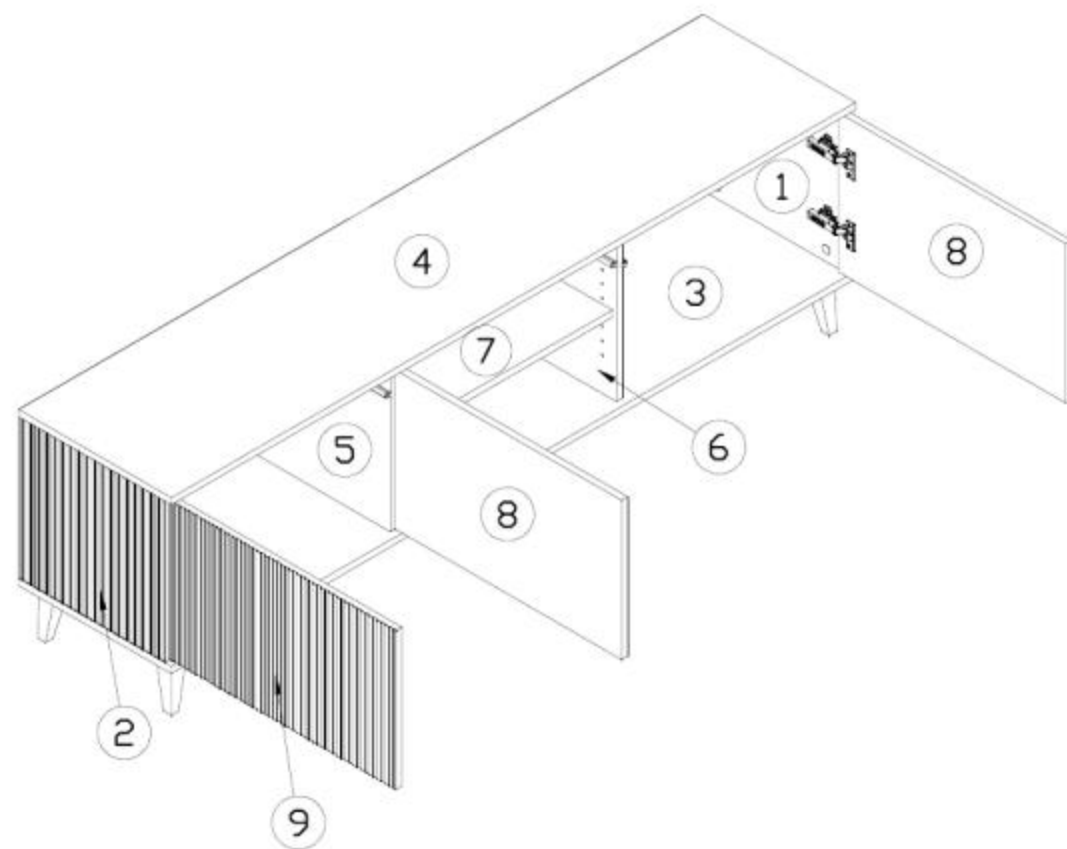 


"LEFT" 6-9

      
 
 
 
RTV 180

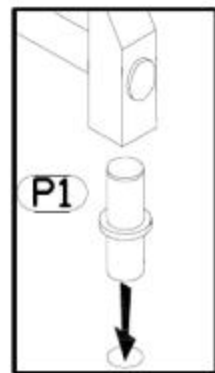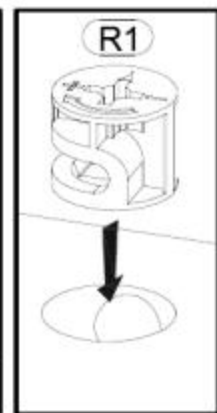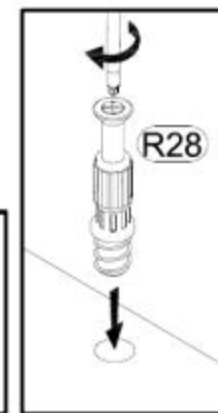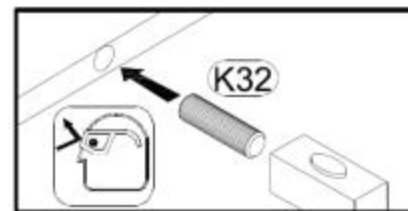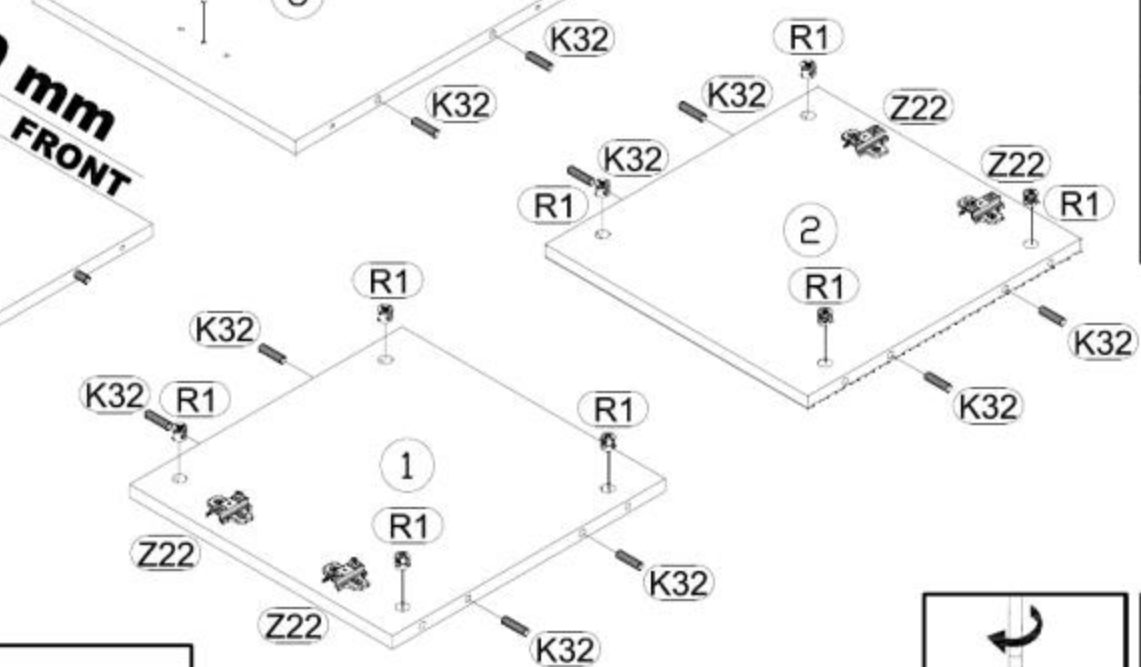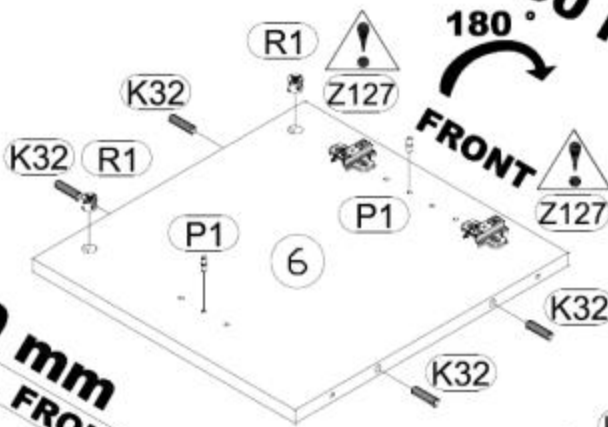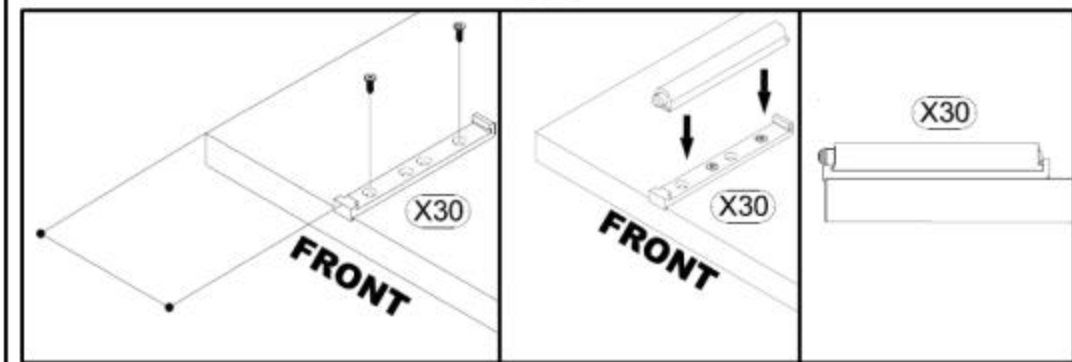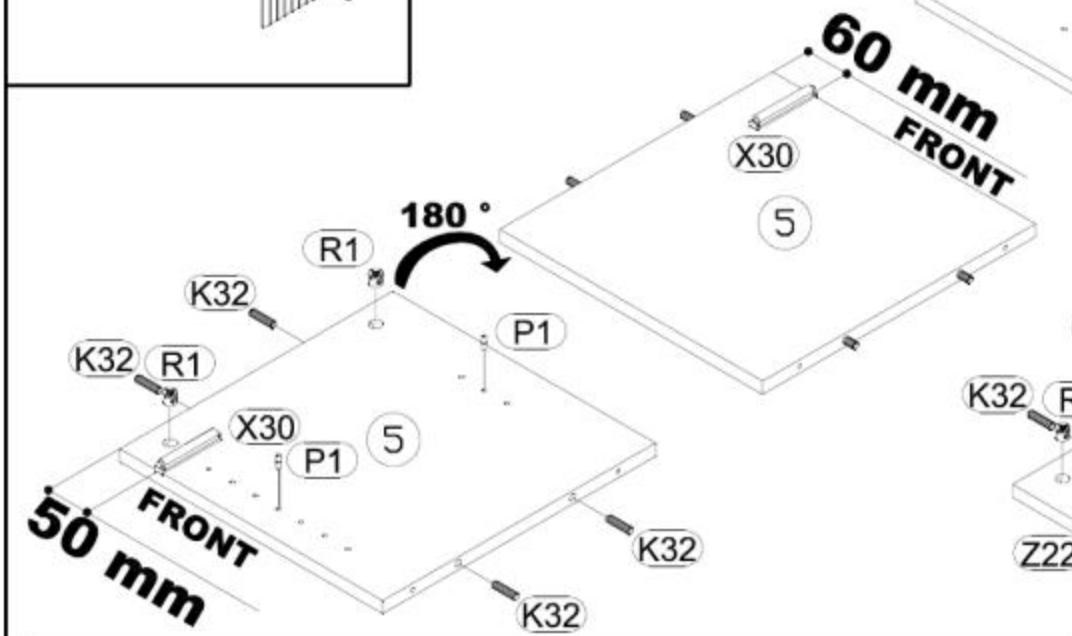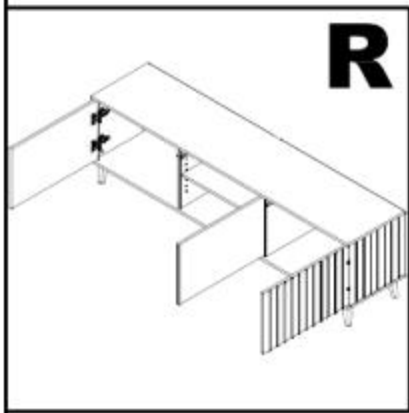






RTV 180

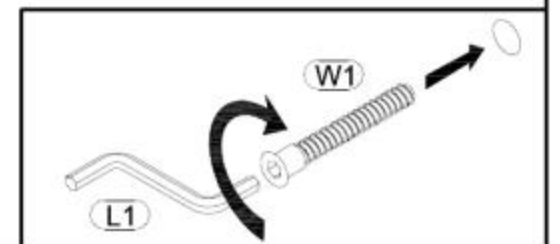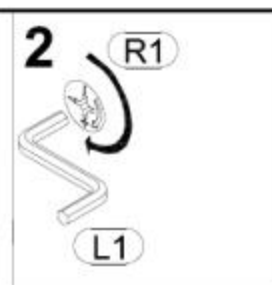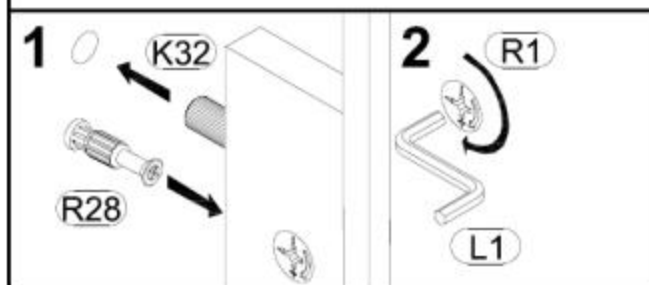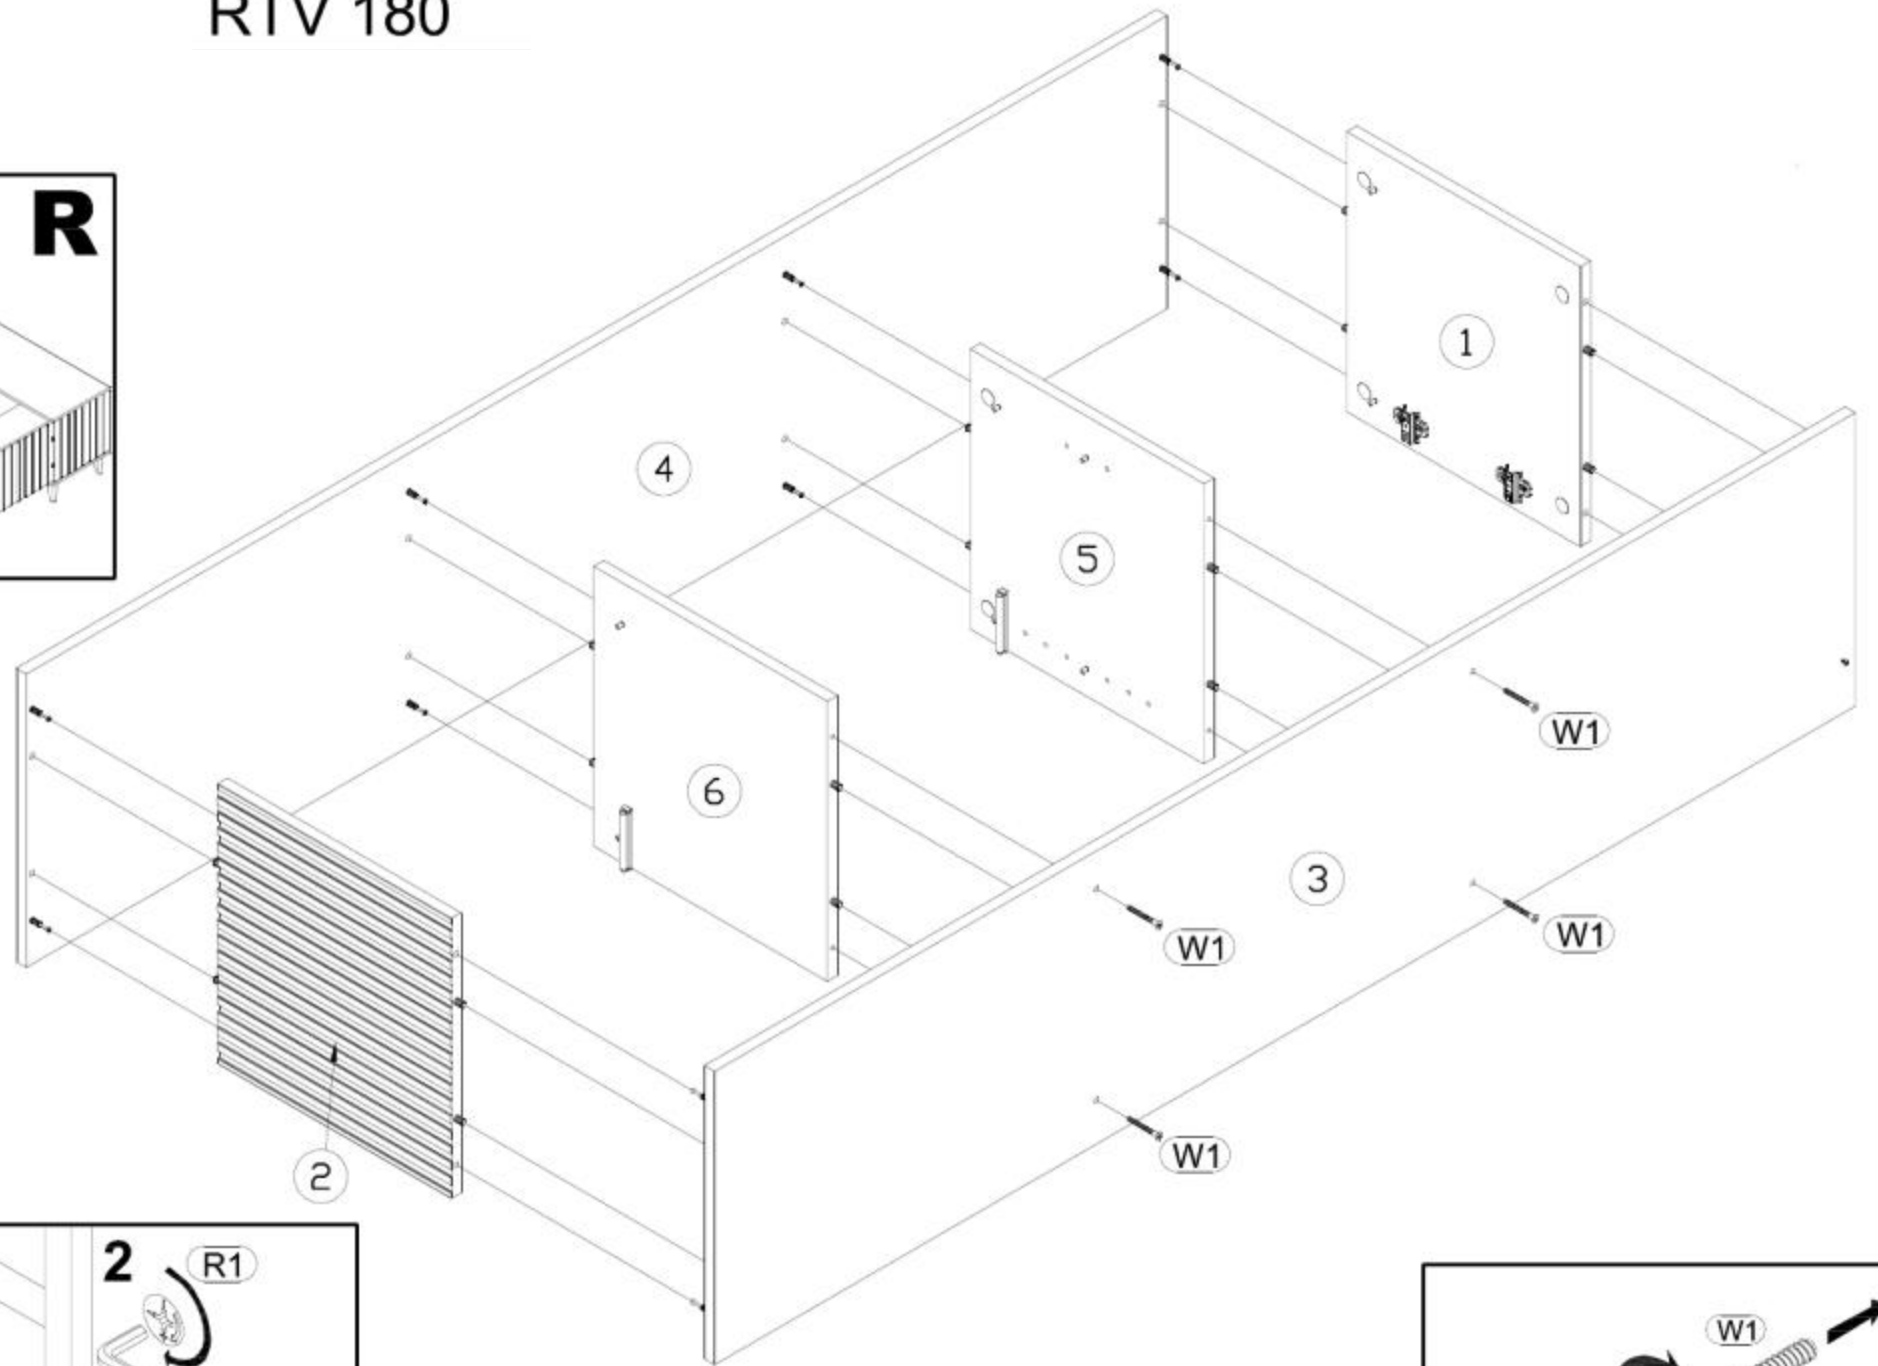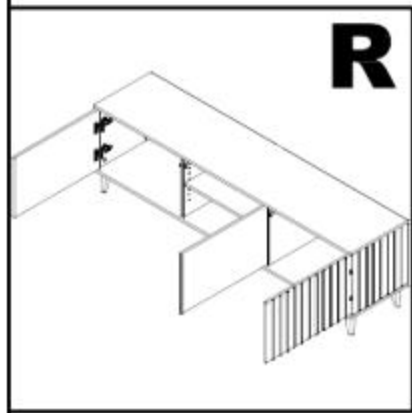     



RTV 180

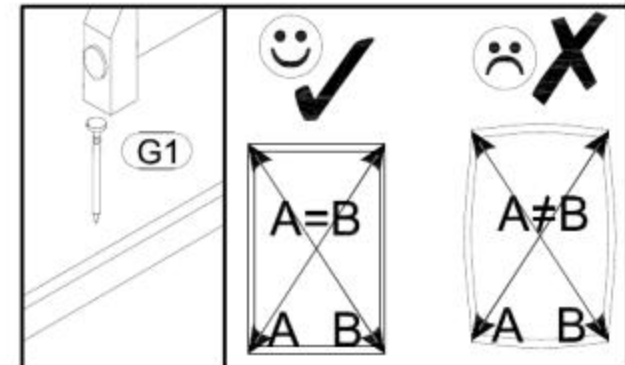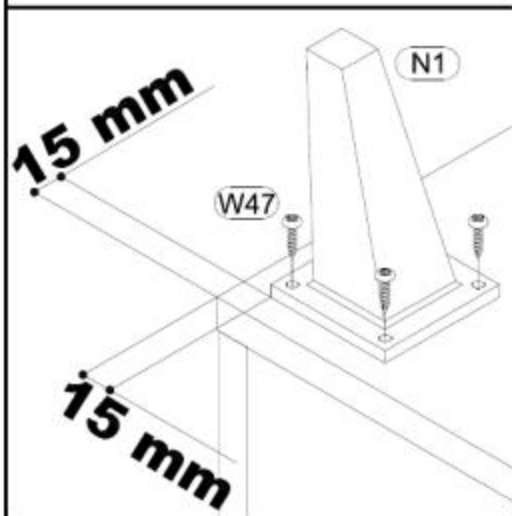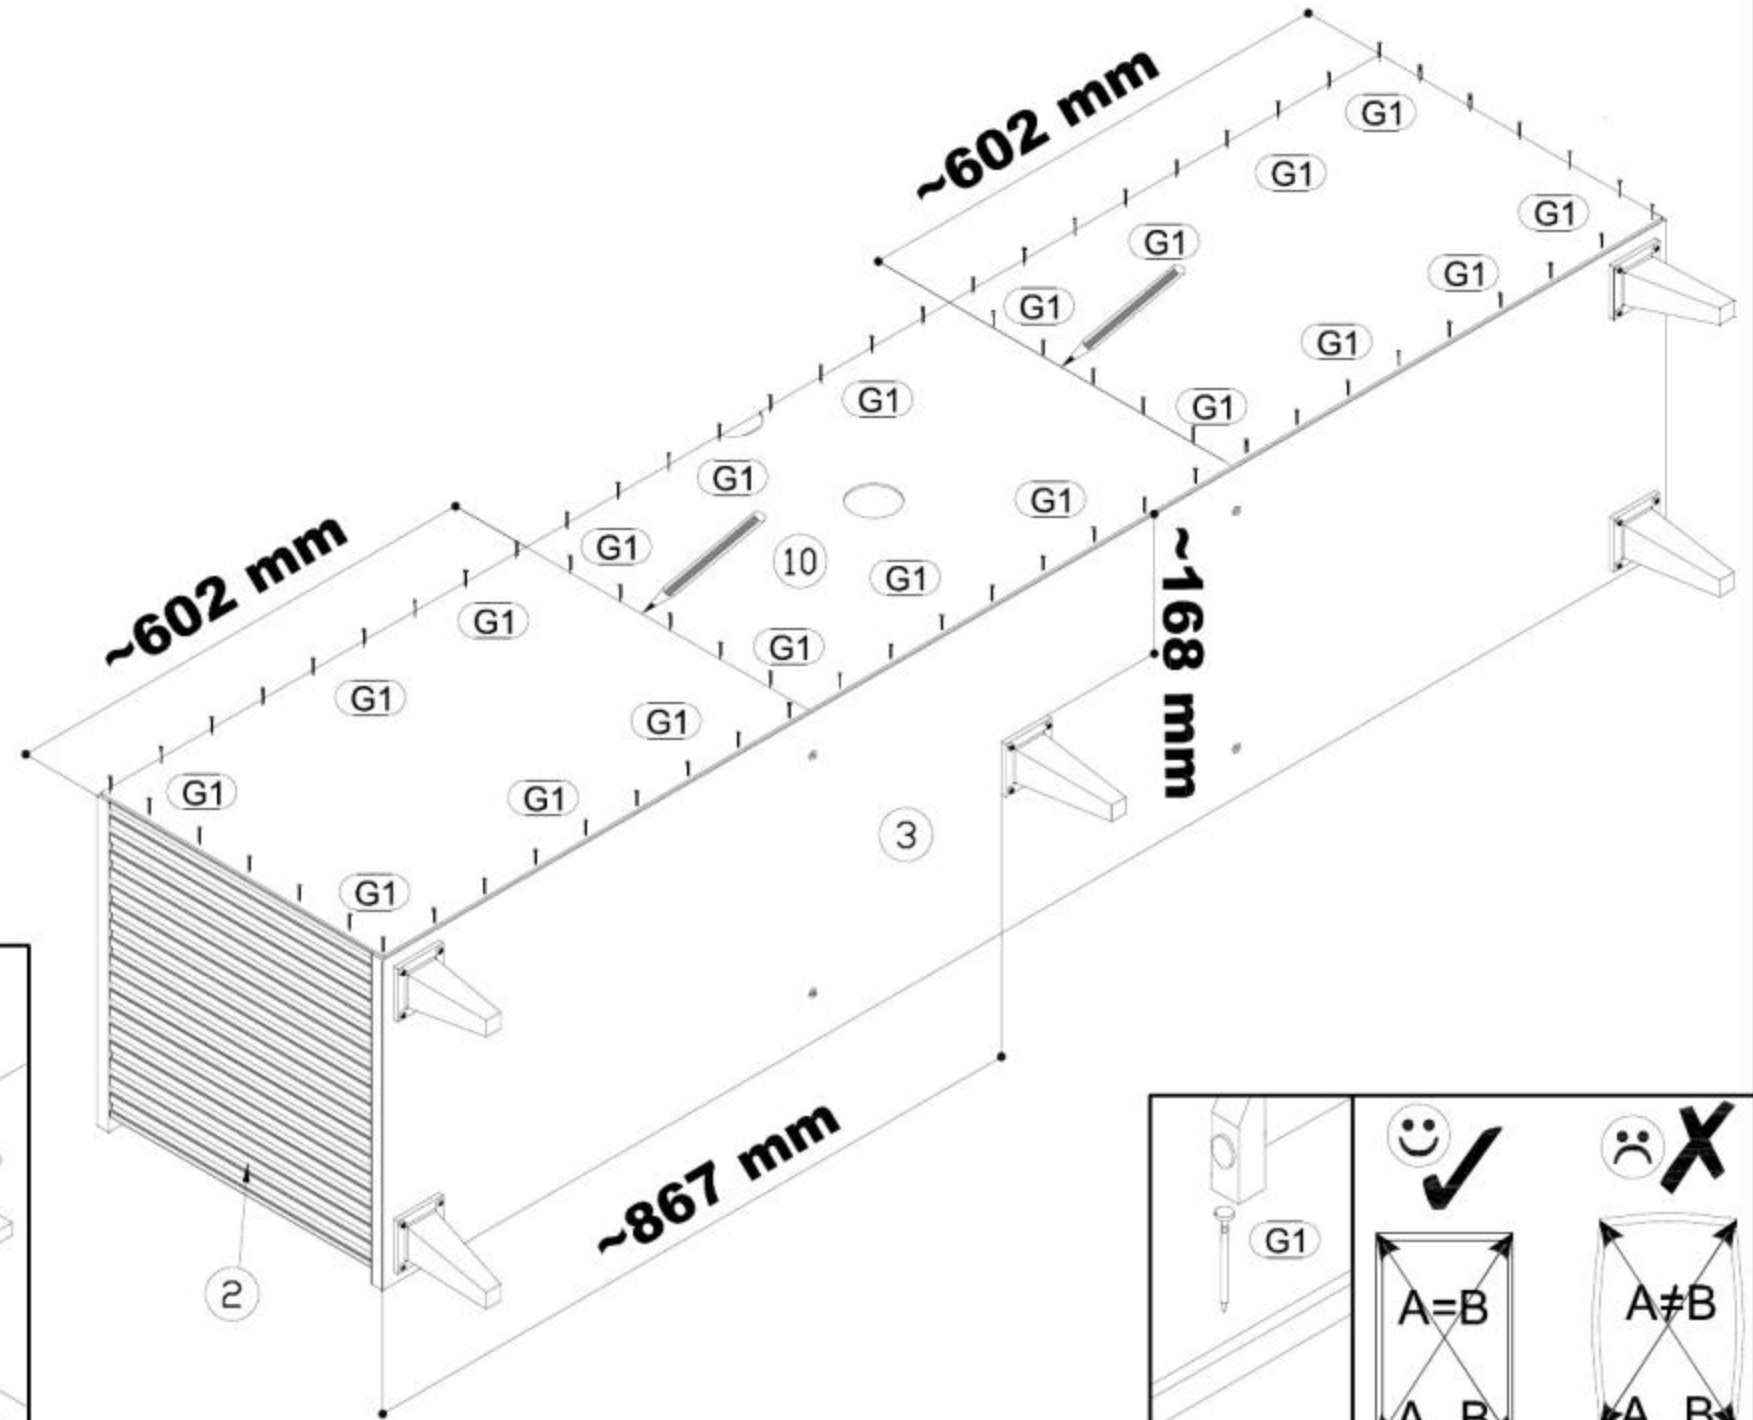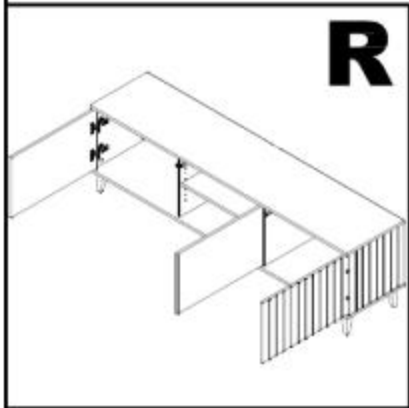    


RTV 180

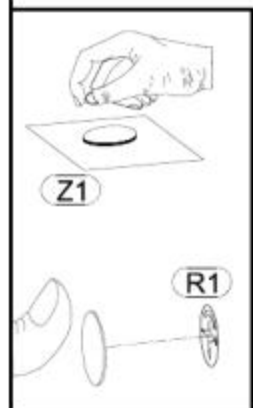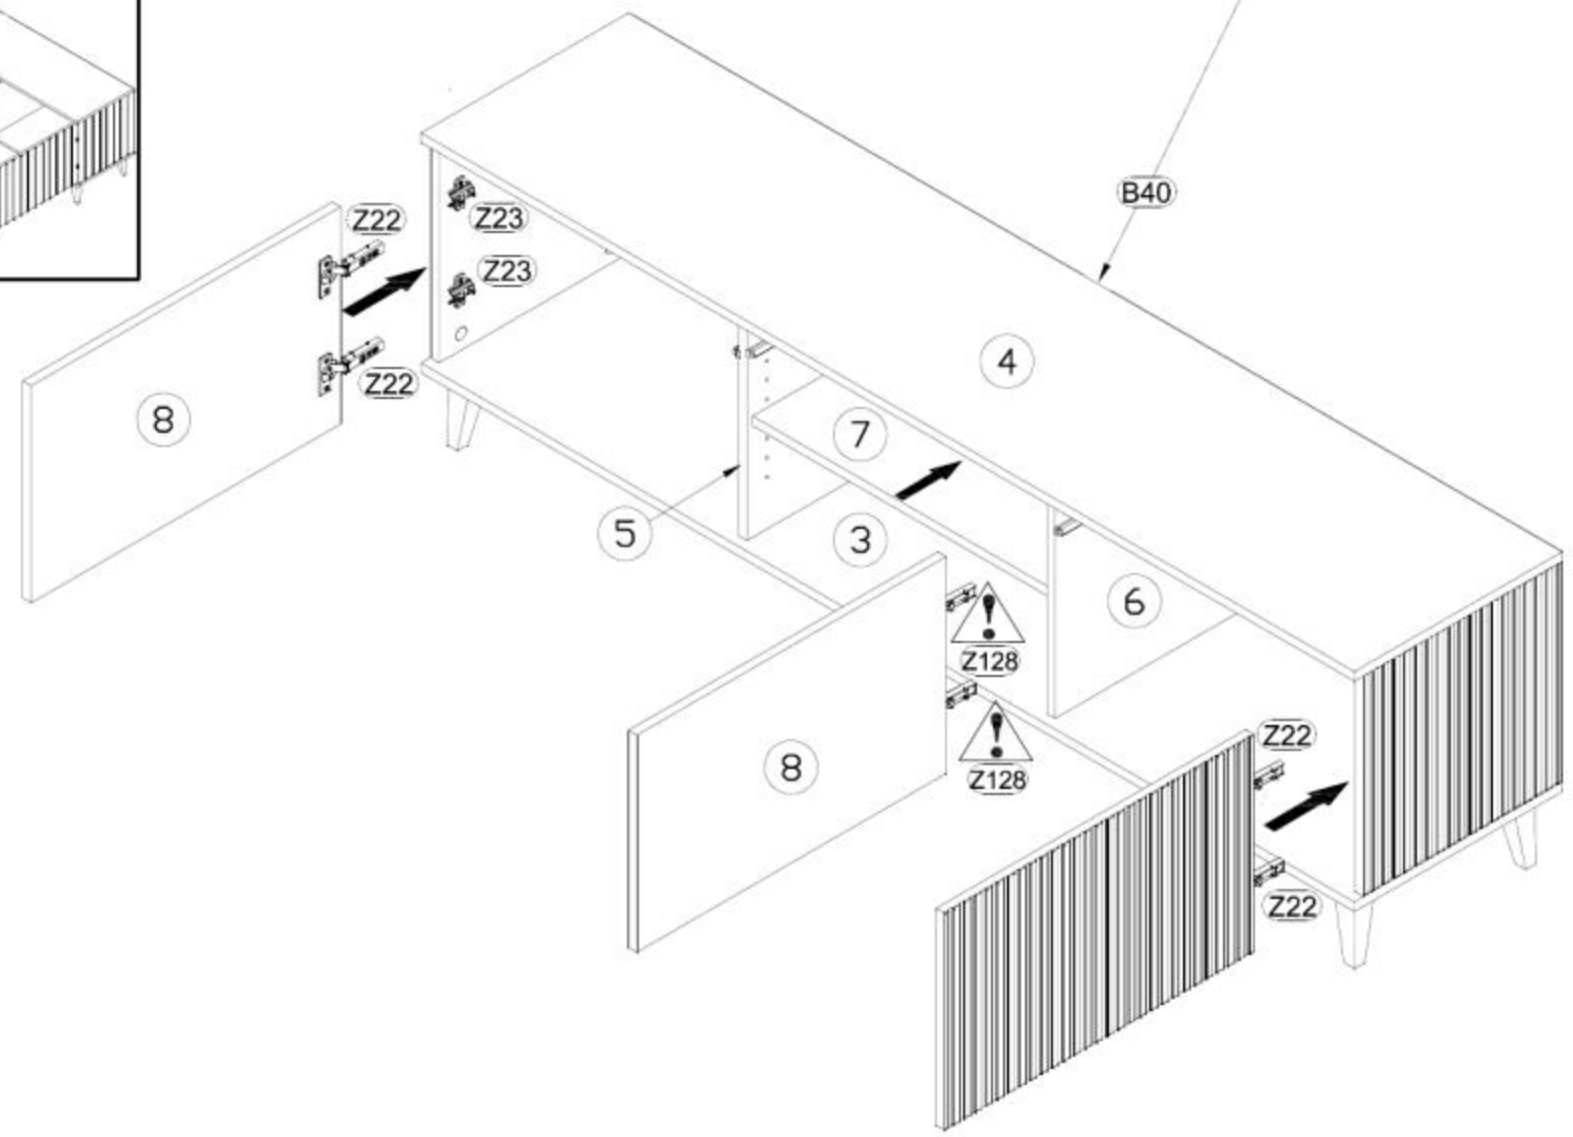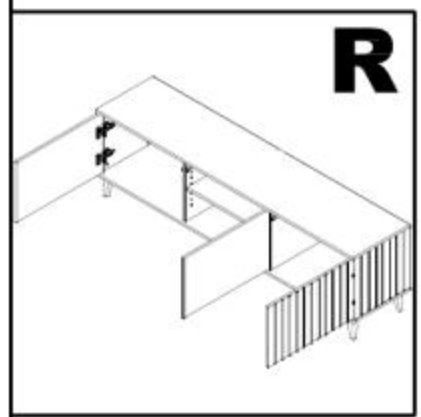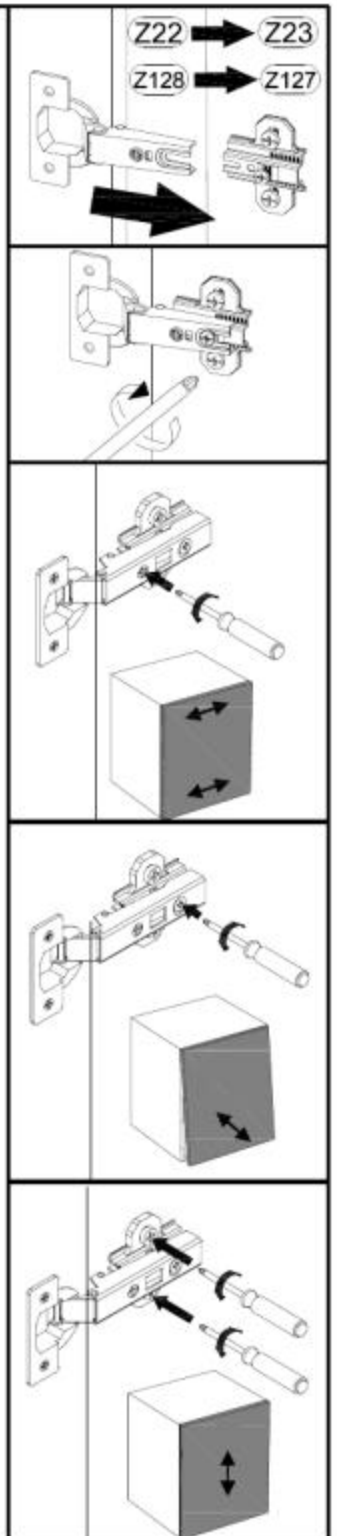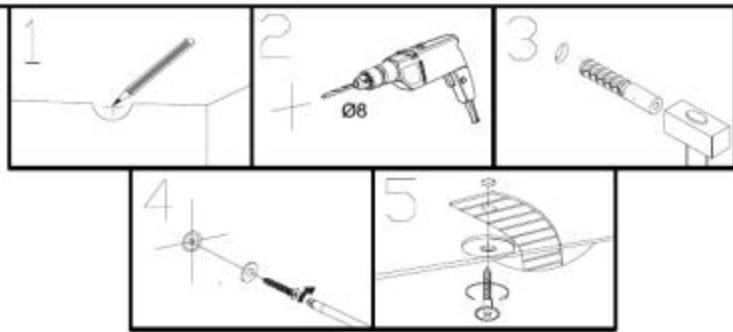     



RTV 180

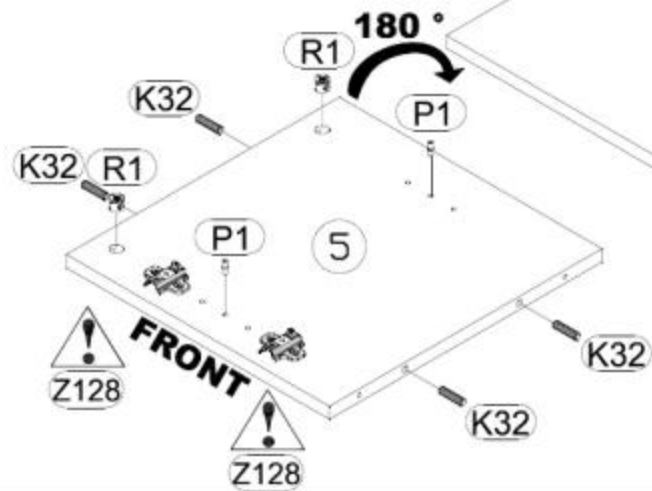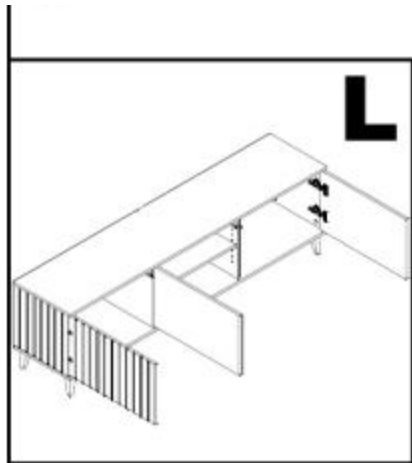  








60 mm
FRONT

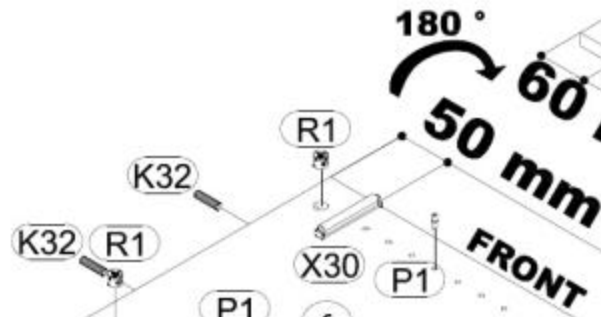 





180°
60 mm
50 mm
FRONT

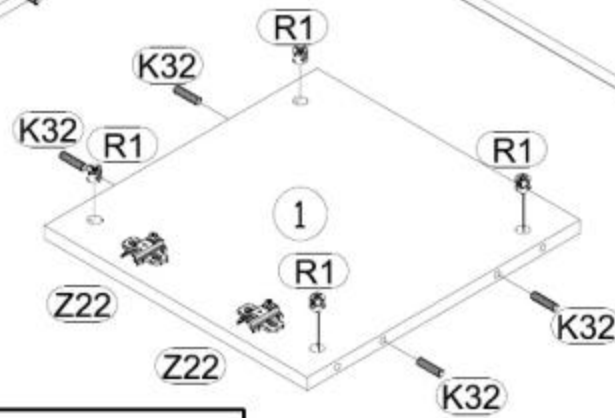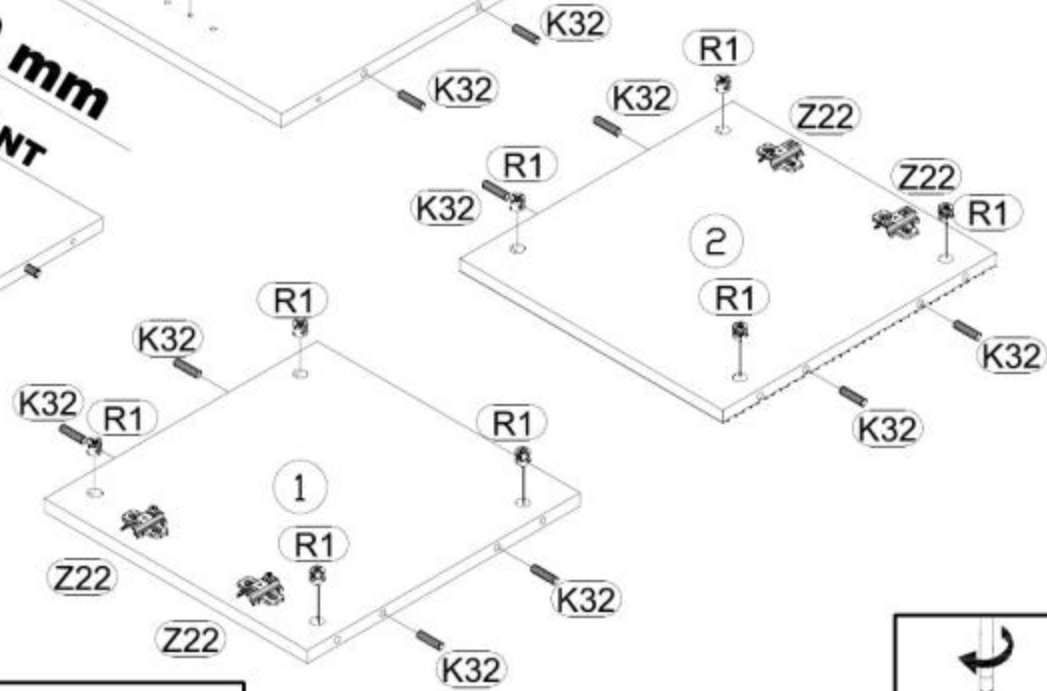  





Z22 Z128

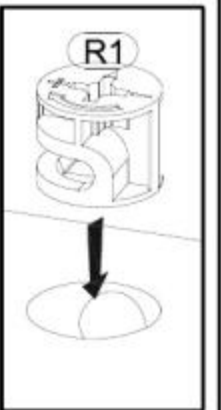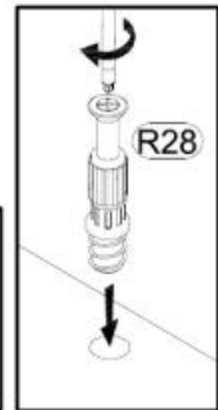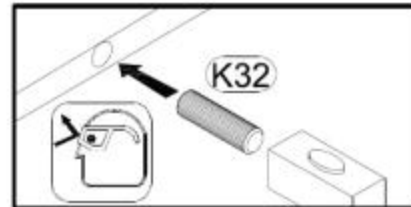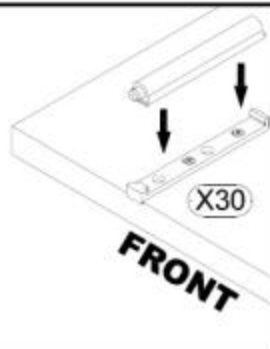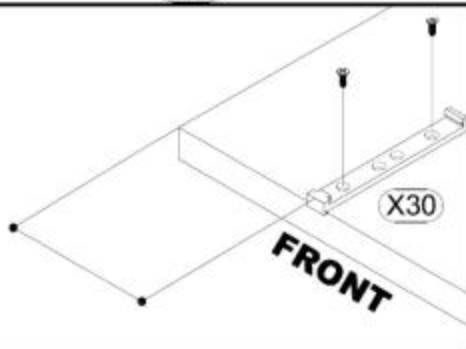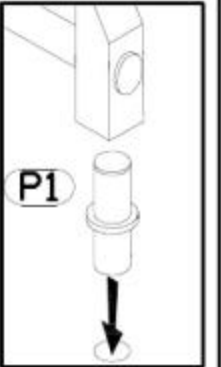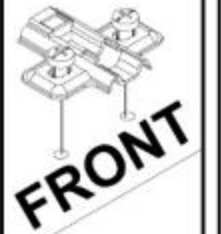       

RTV 180

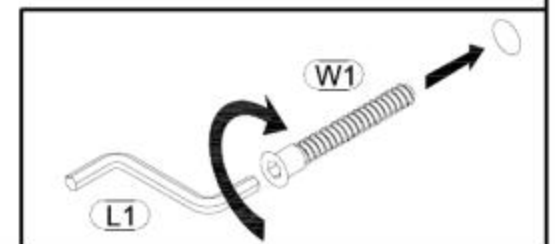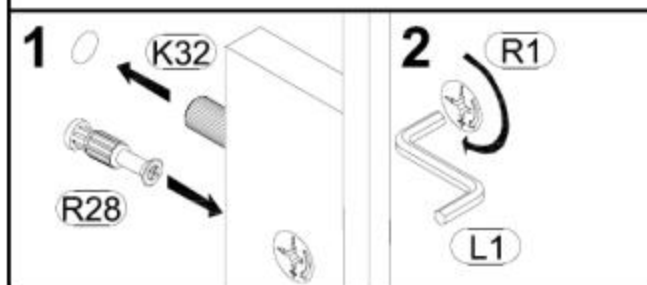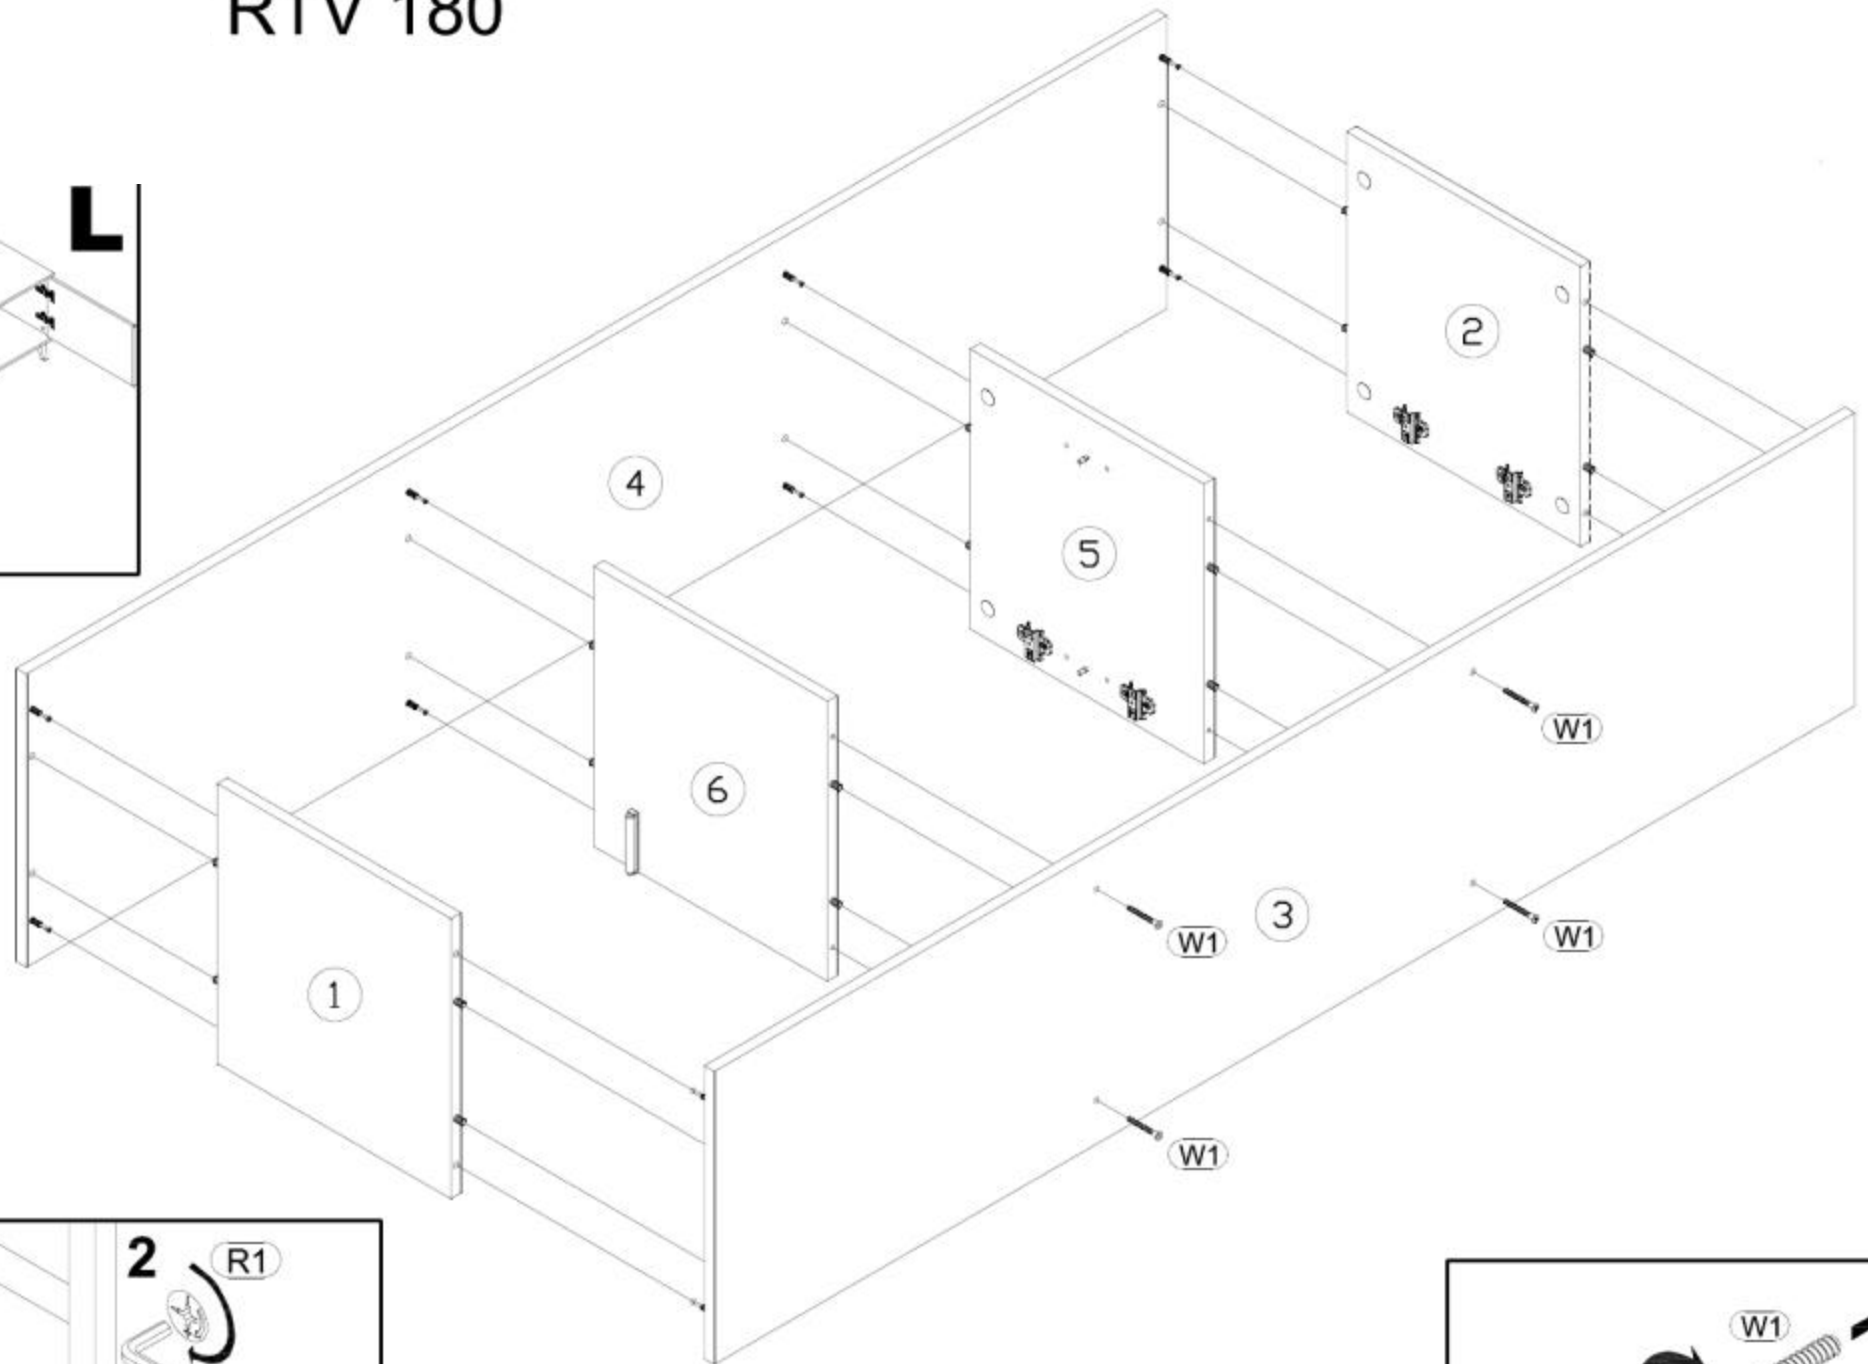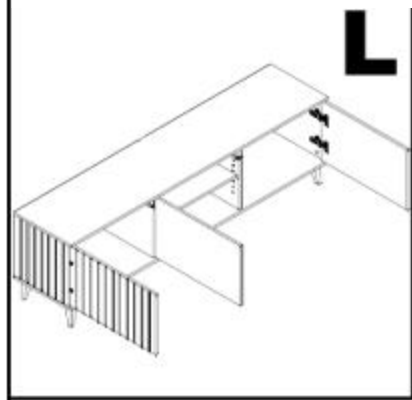    

RTV 180

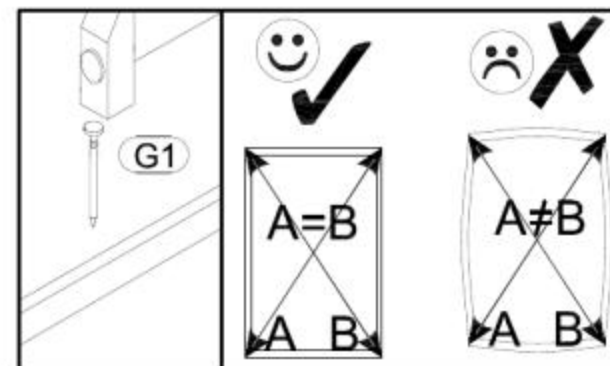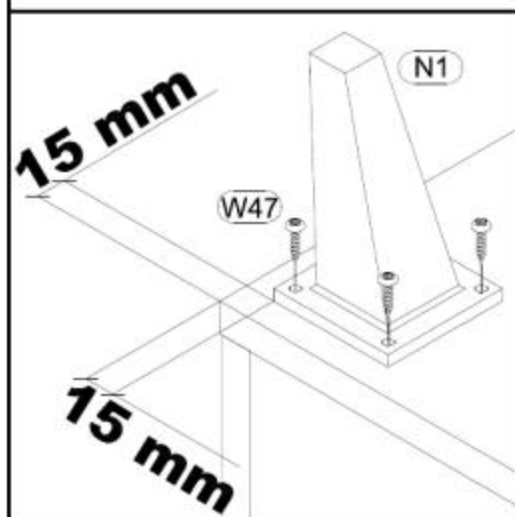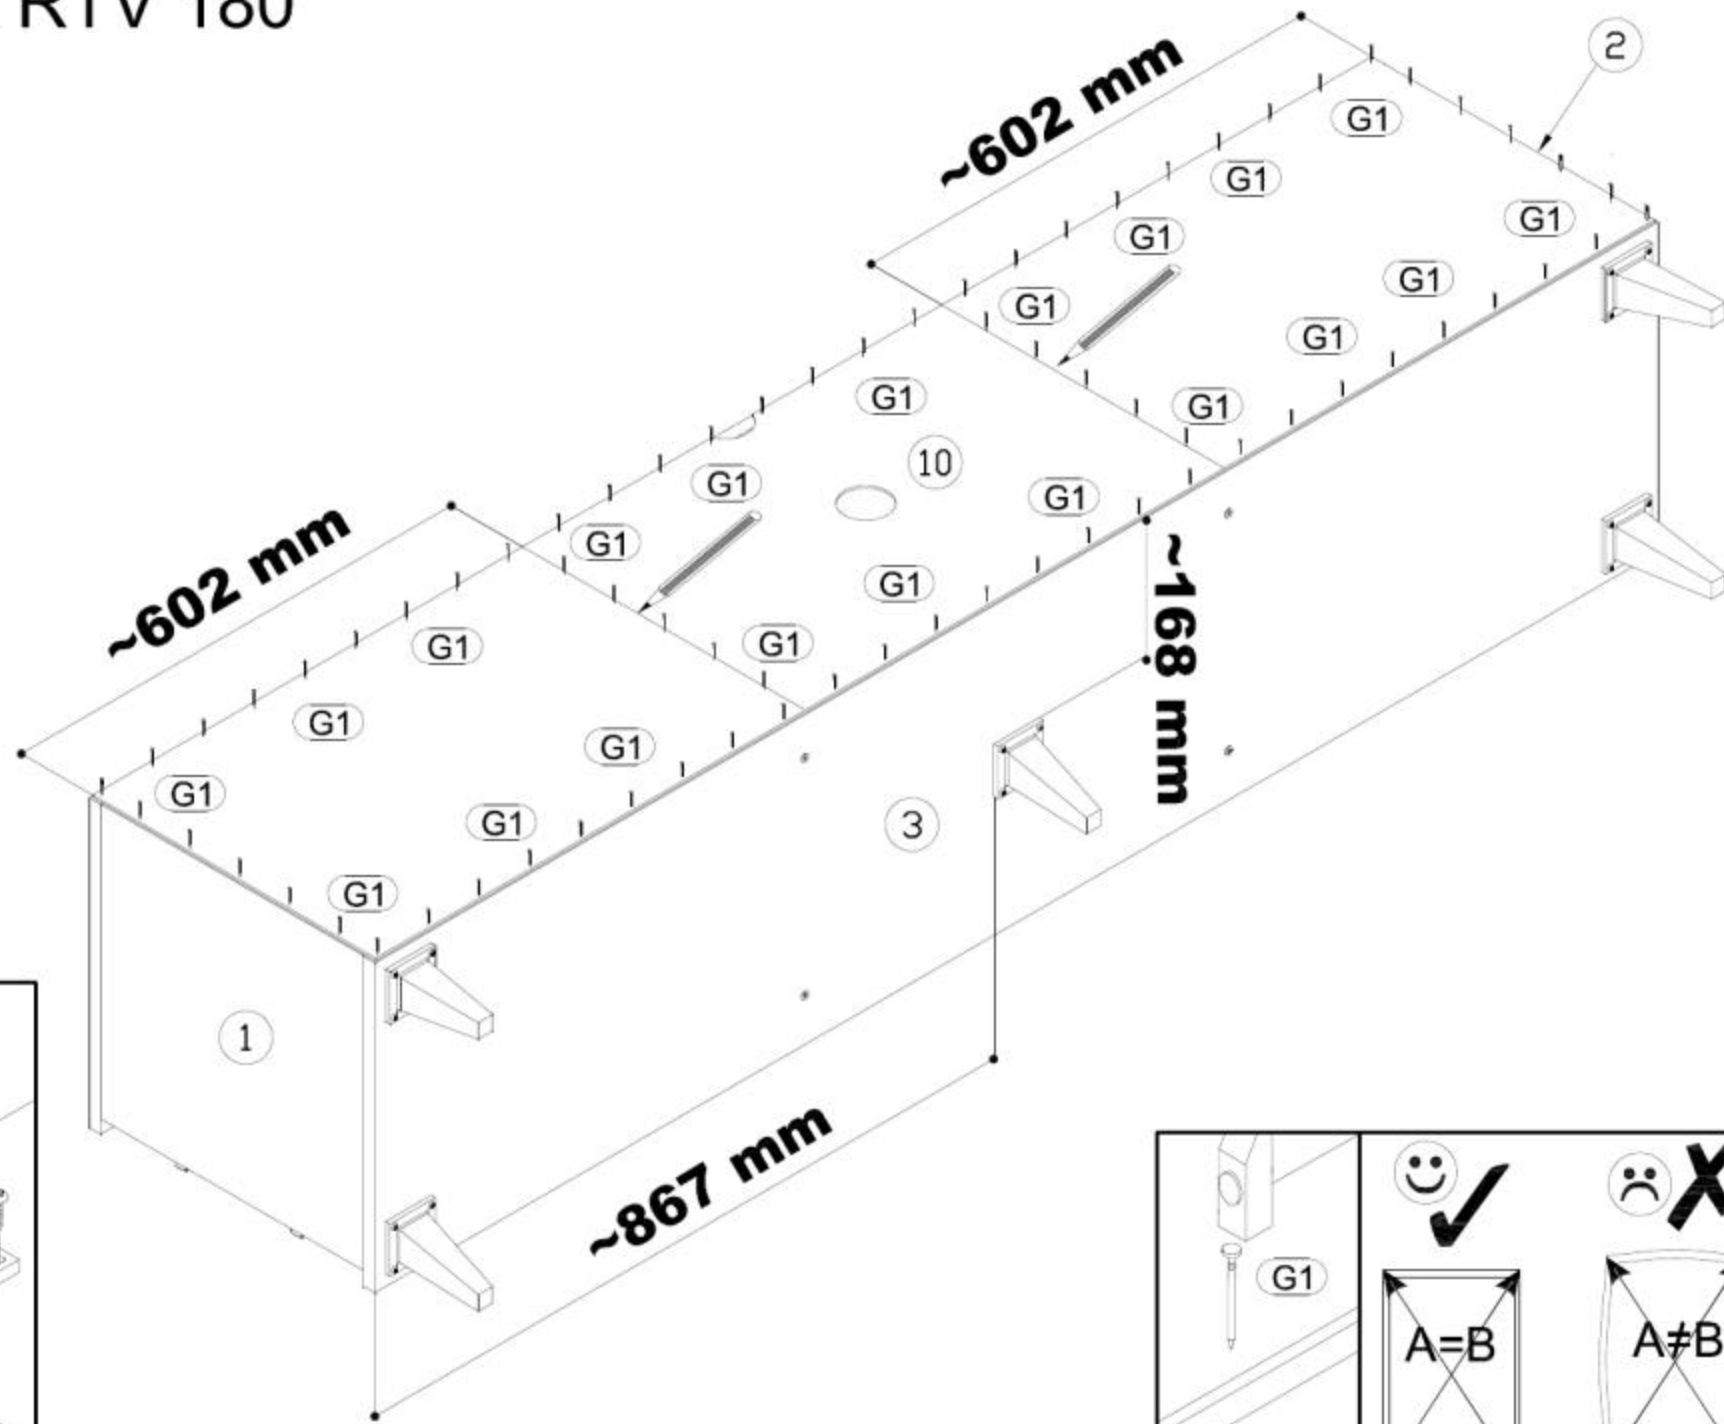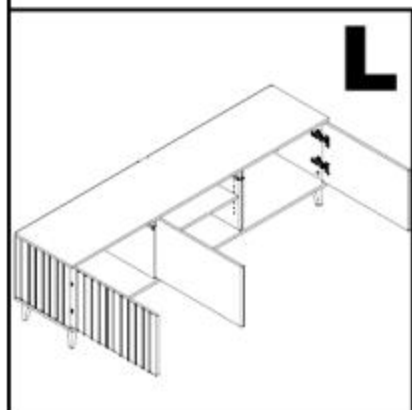    

RTV 180

